CyberPro 1S1P
Quick Installation Guide

Introducing the *CyberPro 1S1P*

The *CyberPro 1S1P* high-speed serial card provides one 9-pin serial port and one parallel port.

Features and Benefits

- Conforms to PCI v2.2 Plug and Play
- Full support for Windows-based software
- Supports 32-/64-bit, 3.3V/5V PCI and PCI-X slots
- One high-speed 16550 UART serial port (9-pin) supports data rate up to 230 Kbps
- Built-in 32-byte FIFO buffer dramatically increase data transmit/receive speed, especially under Windows' multitasking environment
- The serial port can be configured for either 5V or 12V output, for serial devices that require power
- IEEE 1284 compliant SPP/EPP/ECP parallel port

System Requirements

- Pentium or equivalent computer with an available PCI slot
- Windows® 95/98/98SE/ME/NT 4.0/2000/XP (32-/64-bit)/Server 2003 (32-/64-bit)/Vista (32-/64-bit)

Package Contents

- *CyberPro 1S1P* board
- 1S1P Fan-out cable
- Driver CD
- Quick Installation Guide

Layout

Depending on the model purchased, your board will come with either a full or a low profile bracket.

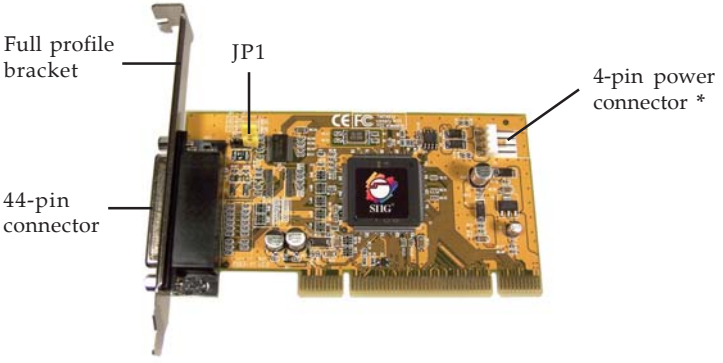

Figure 1. Layout

* Connecting the *4-pin power connector* provides stable power to the PCI board. This connection is **optional** and not needed in most systems.

Jumper Setting (JP1)

Open = 0 Volts (default)

Short 1-2 = 5V

Short 2-3 = 12V

> **Note:** Most serial devices do not require additional power through the serial port. Refer to your serial device's manual for more information.

1S1P Fan-out Cable

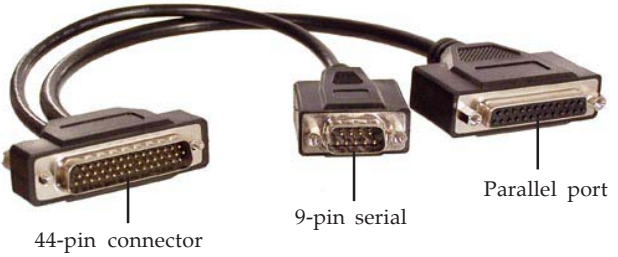

Figure 2. 1S1P fan-out cable

Hardware Installation

General instructions for installing the card are provided below. Since the design of computer cases and motherboards vary, refer to your computer's reference manual for further information, if needed.

Static Electricity Discharge may permanently damage your system. Discharge any static electricity build up in your body by touching your computer's case for a few seconds. Avoid any contact with internal parts and handle cards only by their external edges.

1. Turn OFF the power to your computer and any other connected peripheral devices.
2. Unplug the power cord from the back of the computer.
3. Remove your computer's cover.
4. Remove the slot bracket from an available PCI slot.

5. Set **JP1** jumper settings to the desired voltage only if your serial device needs additional power from the serial port. For more information, see **Jumper Setting** on page **2**. Skip this step if power is not required.
6. Carefully align the card's bus connector with the selected PCI slot on the motherboard. Push the board down firmly, but gently, until it is well seated. Replace the slot bracket holding screw to secure the card.
7. Connect the system power supply to board's *4-pin power connector*. This connection is **optional**, see **Figure 1** on page **2** for more information.
8. Replace the computer cover and reconnect the power cord.
9. Connect the *Fan-out cable* to the board's *44-pin connector*. Hardware installation is now complete.

Software Installation

This section provides information on how to install the *CyberPro* 1S1P drivers.

Windows 95

1. At the **Update Device Driver Wizard**, click **Next**.
2. Insert the driver CD, then click **Other Locations**, type **D:\9x**, click **OK**, then click **Finish**.
   (Change **D:** to match your CD-ROM drive letter)
3. At the **Insert Disk** window, click **OK**. When the **Copying Files** dialog box appears, type in **D:\9x,** then click **OK**.
4. Repeat steps **1-3**.
5. Restart Windows to complete the installation.

Windows 98/98SE

1. At the **Add New Hardware Wizard**, click **Next**.
2. Select **Search for the best driver for your device (Recommended)**, then click **Next**.
3. Insert the driver CD, check **Specify a location**, uncheck the other boxes, type in **D:\9x,** then click **Next**. (Change **D:** to match your CD-ROM drive letter)
4. Click **Next,** then **Finish**.
5. Repeat steps **1-4**.
6. Restart Windows to complete the installation.

Windows ME

1. At the **Add New Hardware Wizard**, choose **Specify the location of the driver (Advanced),** then click **Next.**
2. Insert the driver CD, check **Specify a location**, uncheck the other box, type in **D:\ME,** then click **Next.** (Change **D:** to match your CD-ROM drive letter)
3. Click **Next** and **Finish**.
4. Repeat steps **1-3**.
5. Restart Windows to complete the installation.

To Verify Windows 95/98/98SE/ME Installation

1. Right click **My Computer**, click **Properties**, then click **Device Manager**.
2. Double click **Ports (COM & LPT)**, **CyberSerial PCI 16Cxxx..., Printer Port...**, and **CyberParallel PCI** should be displayed.
3. Double click **Multi-function adapters, SIIG CyberPro 1S1P PCI board** should be displayed.

Windows NT 4.0

1. From the desktop click **Start,** then **Run**.
2. Insert the driver CD, type in **D:\NT4\Install_Serial.exe,** then click **OK**. (Change **D:** to match your CD-ROM drive letter)
3. When the **Welcome** window appears, click **Next**.
4. Choose **Install**, then click **Next**.
5. Click **Yes**, then click **Exit**.
6. From the desktop click **Start,** then **Run**.
7. Type in **D:\NT4\Install_Parallel.exe,** then click **OK**. (Change **D:** to match your CD-ROM drive letter)
8. Repeat steps **3-5**.
9. Click **Yes** to restart Windows to complete the installation.

To Verify Windows NT 4.0 Installation

1. Click **Start**, **Settings, Control Panel**, double click **Ports** icon.
2. A new **COM** port will be assigned when successfully installed.
3. Click **Start**, **Programs**, **Administrative Tools**, **Windows NT Diagnostics**. Click **Resources** tab, **SIIGpar** and **SIIGser** should be displayed.

Windows 2000

1. At the **Found New Hardware Wizard**, click **Next**.
2. Select **Search for a suitable driver for my device (recommended)**, and click **Next**.
3. Check **Specify a location**, uncheck the other boxes, and click **Next**.
4. Insert the driver CD, type in **D:\2000**, then click **OK**. (Change **D:** to match your CD-ROM drive letter)
5. Click **Next** and **Finish**.
6. Repeat steps **1-5** two more times.
7. Restart Windows to complete the installation.

32-bit Windows XP/Server 2003

1. At the **Found New Hardware Wizard,** insert the driver CD.

   For XP w/SP1 or earlier/ Server 2003: go to step #2.

   For XP w/SP2 or later/Server 2003 wSP1 or later: select **No, not this time**, click **Next**.
2. Select **Install the software automatically (Recommended**, then click **Next**.
3. Click **Finish**.
4. Repeat steps **1-3** two more times.
5. Restart Windows to complete the installation.

64-bit Windows XP/Server 2003

1. At the **Found New Hardware Wizard,** insert the driver CD.

   For XP w/SP1 or earlier/ Server 2003: go to step #2.

   For XP w/SP2 or later/Server 2003 wSP1 or later: select **No, not this time**, click **Next**.

2. Select **Install the software automatically (Recommended**, then click **Next**.
3. Click **Continue Anyway**, then click **Finish**.
4. Repeat steps **1-3** several more times.
5. Restart Windows to complete the installation.

To Verify Windows 2000/XP/Server 2003 Installation

1. Right click **My Computer**, click **Manage**, then click **Device Manager**.
2. Double click **Ports (COM & LPT)**, **CyberSerial PCI 16Cxxx...** and **CyberParallel PCI...** should be displayed.
3. Double click **Multifunction adapters**, **SIIG CyberPro 1S1P PCI board** should be displayed.

Windows Vista™

1. At the **Found New Hardware** window, insert the driver CD, click **Locate and install driver software (recommended)**, then click **Continue**.
2. Click **Next**, then click **Close**.
3. Repeat step #2 to complete the driver installation.

> **Note**: Windows Vista driver installation process may take several minutes to complete.

To Verify Windows Vista Installation

1. Right click **Computer**, click **Manage**, click **Continue**, then click **Device Manager**.
2. Click on the **+** (plus sign) in front of **Ports (COM & LPT)**, **CyberSerial PCI 16Cxxx...** and **CyberParallel PCI...** should be displayed.

3. Double click **Multifunction adapters**, **SIIG CyberPro 1S PCI board** should be displayed.

Changing COM Port Address

Some serial devices need a specific COM port in order to work. If your serial device works properly, do not change this setting.

Windows 95/98/98SE/ME

1. From **Device Manager**, double click **Ports (COM & LPT)**, then double click the **CyberSerial PCI** serial port you want to change.
2. Click **Settings** tab, at the **Port Name** box click the down arrow and select a COM port that is not currently in use, then click **OK**.
3. Click **OK** to close **Device Manager** to save the changes.

Windows 2000/XP/Server 2003/Vista

1. From **Device Manager**, double click **Ports (COM & LPT)**, then double click the **CyberSerial PCI** serial port you want to change.
2. Click **Settings** tab and click **Advanced...**.
3. At the **COM Port number** box, click the down arrow, select a COM port that is not in use, then click **OK**.
4. Click **OK** again, then close **Device Manager** to save the changes.

Changing Parallel Port Address (LPT)

Some parallel devices need a specific parallel port in order to work. If your parallel device works properly, do not change this setting.

Windows 95/98/98SE/ME

1. From **Device Manager**, double click **Ports (COM & LPT)**, then double click **CyberParallel PCI**.
2. Click **Settings** tab, check **Enable use of I/O location 278h**, then click **OK**.
3. Click **OK** to close **Device Manager**, and click **Yes** to restart Windows to save the changes.

Windows 2000/XP/Server 2003/Vista

1. From **Device Manager**, double click **Ports (COM & LPT)**, then double click **CyberParallel PCI...**.
2. Click **Port Settings** tab.
3. At the **LPT Port Number** box, click the down arrow and select an LPT port that is not in use.
4. Click **OK**, then close **Device Manager** to save the changes.

Technical Support and Warranty

QUESTIONS? SIIG's **Online Support** has answers! Simply visit our web site at ***www.siig.com*** and click **Support**. Our online support database is updated daily with new drivers and solutions. Answers to your questions could be just a few clicks away. You can also submit questions online and a technical support analysts will promptly respond.

SIIG offers a lifetime manufacturer warranty with this product. Please see our web site for more warranty details. If you encounter any problems with this product, please follow the procedures below.

A) If it is within the store's return policy period, please return the product to the store where you purchased from.

B) If your purchase has passed the store's return policy period, please follow these steps to have the product repaired or replaced.

Step 1: Submit your RMA request.

Go to **www.siig.com**, click **Support**, then **RMA** to submit a request to SIIG RMA. If the product is determined to be defective, an RMA number will be issued. SIIG RMA department can also be reached at (510) 413-5333.

Step 2: After obtaining an RMA number, ship the product.

- Properly pack the product for shipping. All software, cable(s) and any other accessories that came with the original package must be included.
- Clearly write your RMA number on the top of the returned package. SIIG will refuse to accept any shipping package, and will not be responsible for a product returned without an RMA number posted on the outside of the shipping carton.
- You are responsible for the cost of shipping. Ship the product to the following address:

  SIIG, Inc.
  6078 Stewart Avenue
  Fremont, CA 94538-3152, USA
  RMA#: _____

- SIIG will ship the repaired or replaced product via Ground in the U.S. and International Economy outside of the U.S. at no cost to the customer.

About SIIG, Inc.

Founded in 1985, SIIG, Inc. is a leading computer upgrade manufacturer of I/O connectivity products, including PCI & ISA serial and parallel ports, USB, Serial ATA & UltraATA controllers, FireWire (1394a/b), networking, sound cards, and other accessories. SIIG is the premier one-stop source of upgrades.

SIIG products offer comprehensive user manuals, many user-friendly features, and are backed by an extensive manufacturer warranty. High-quality control standards are evident by the overall ease of installation and compatibility of our products, as well as one of the lowest defective return rates in the industry. SIIG products can be found in computer retail stores, mail order catalogs, through major distributors, system integrators, and VARs in the Americas and the UK, and through e-commerce sites.

PRODUCT NAME
CyberPro 1S1P

FCC RULES: TESTED TO COMPLY WITH FCC PART 15, CLASS B OPERATING ENVIRONMENT: FOR HOME OR OFFICE USE

FCC COMPLIANCE STATEMENT:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

THE PARTY RESPONSIBLE FOR PRODUCT COMPLIANCE

SIIG, Inc.
6078 Stewart Avenue
Fremont, CA 94538-3152, USA

CyberPro 1S1P is a trademark of SIIG, Inc. SIIG and the SIIG logo are registered trademarks of SIIG, Inc. Microsoft, Windows and Windows Vista are registered trademarks of Microsoft Corporation. Pentium is a registered trademark of Intel Corporation. Other names used in this publication are for identification only and may be trademarks of their respective companies.

October, 2007 Copyright © 2007 by SIIG, Inc. All rights reserved.